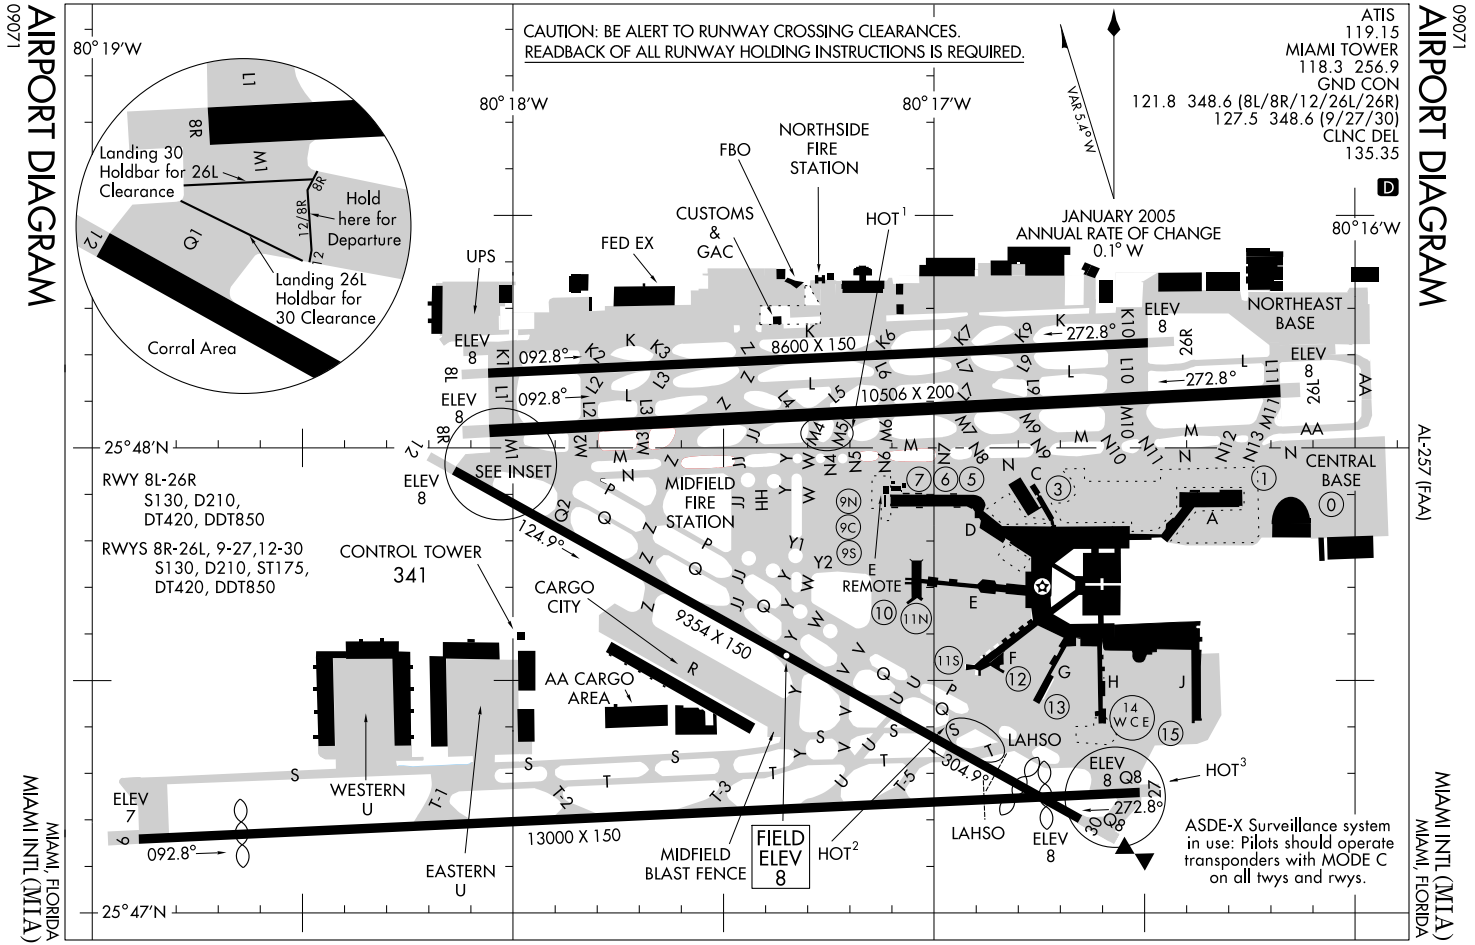
AIRPORT DIAGRAM
09071
MIAMI, FLORIDA
MIAMI INTL (MIA)
CAUTION: BE ALERT TO RUNWAY CROSSING CLEARANCES.
READBACK OF ALL RUNWAY HOLDING INSTRUCTIONS IS REQUIRED.
ATIS
119.15
MIAMI TOWER
118.3 256.9
GND CON
121.8 348.6 (8L/8R/12/26L/26R)
127.5 348.6 (9/27/30)
CLNC DEL
135.35
VAR 5.4°W
JANUARY 2005
ANNUAL RATE OF CHANGE
0.1° W
80°19'W
80°18'W
80°17'W
80°16'W
25°48'N
25°47'N
Landing 30
Holdbar for 26L
Clearance
Hold
here for
Departure
Landing 26L
Holdbar for
30 Clearance
Corral Area
RWY 8L-26R
S130, D210,
DT420, DDT850
RWYS 8R-26L, 9-27,12-30
S130, D210, ST175,
DT420, DDT850
SEE INSET
CONTROL TOWER
341
CARGO
CITY
AA CARGO
AREA
WESTERN
U
EASTERN
U
MIDFIELD
FIRE
STATION
MIDFIELD
BLAST FENCE
FIELD
ELEV
8
FBO
NORTHSIDE
FIRE
STATION
CUSTOMS
&
GAC
FED EX
UPS
HOT1
HOT2
HOT3
8600 X 150
10506 X 200
9354 X 150
13000 X 150
092.8°
124.9°
272.8°
304.9°
ELEV
8
ELEV
7
ELEV
8 Q8
NORTHEAST
BASE
CENTRAL
BASE
REMOTE
LAHSO
ASDE-X Surveillance system
in use: Pilots should operate
transponders with MODE C
on all twys and rwys.
AL-257 (FAA)
MIAMI INTL (MIA)
MIAMI, FLORIDA